


L — N ：
110V AC

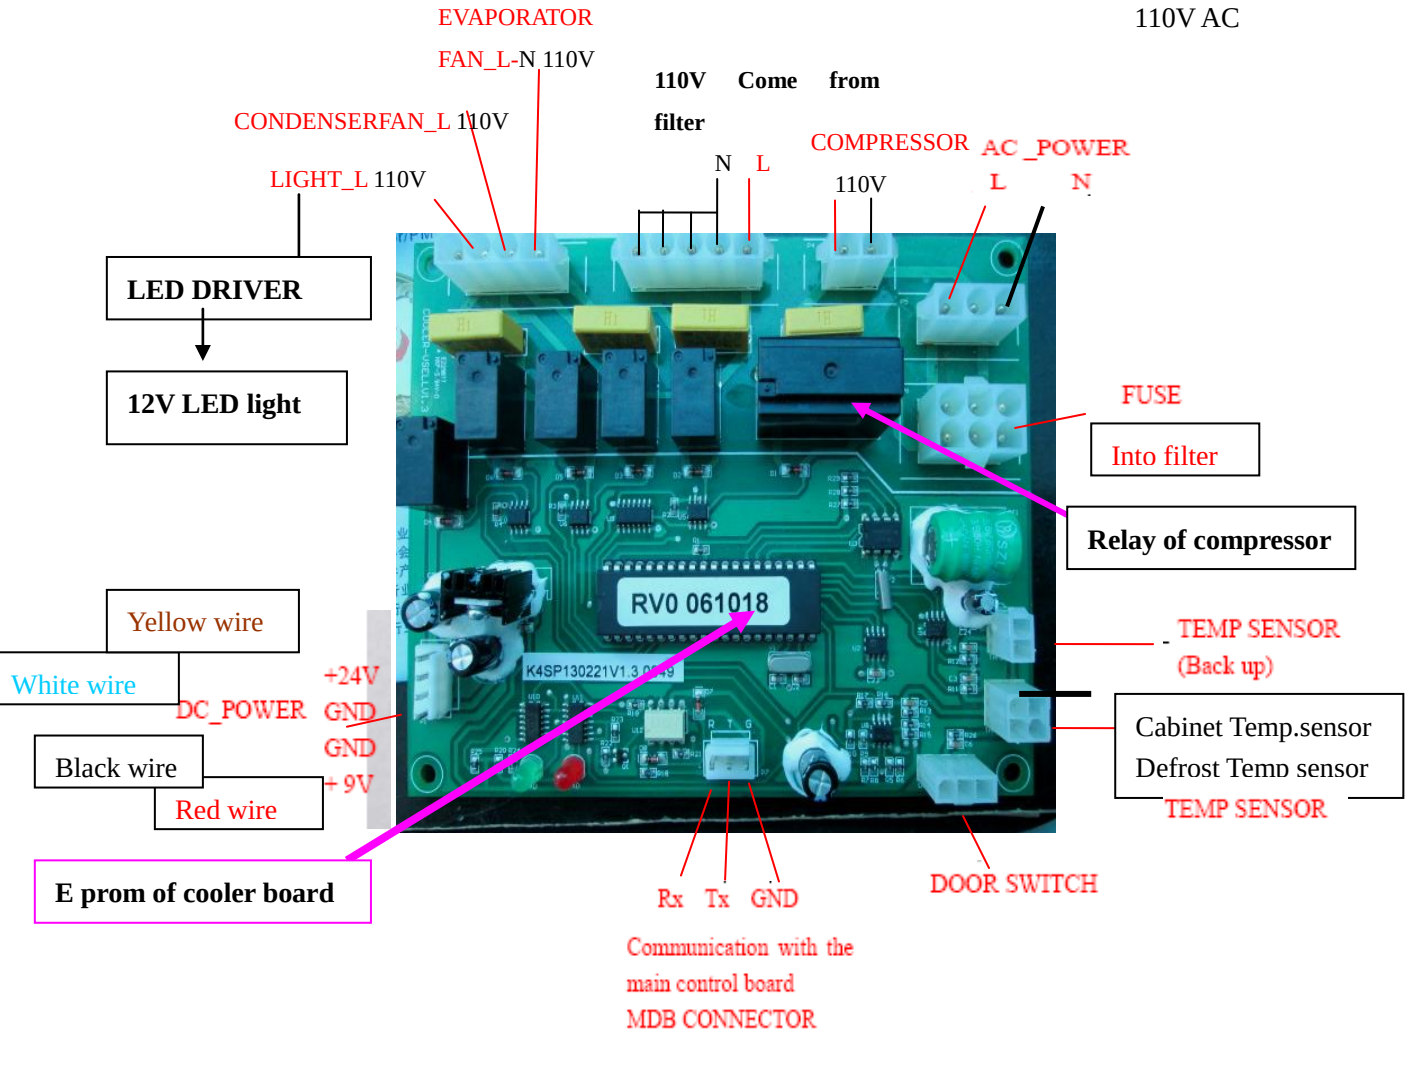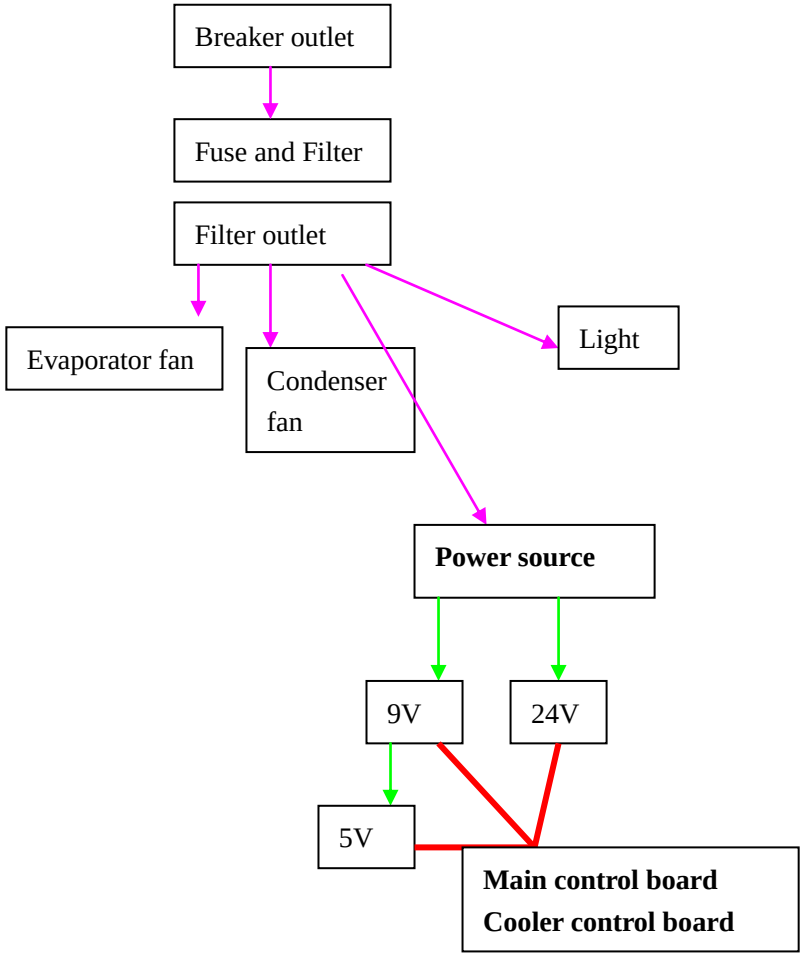

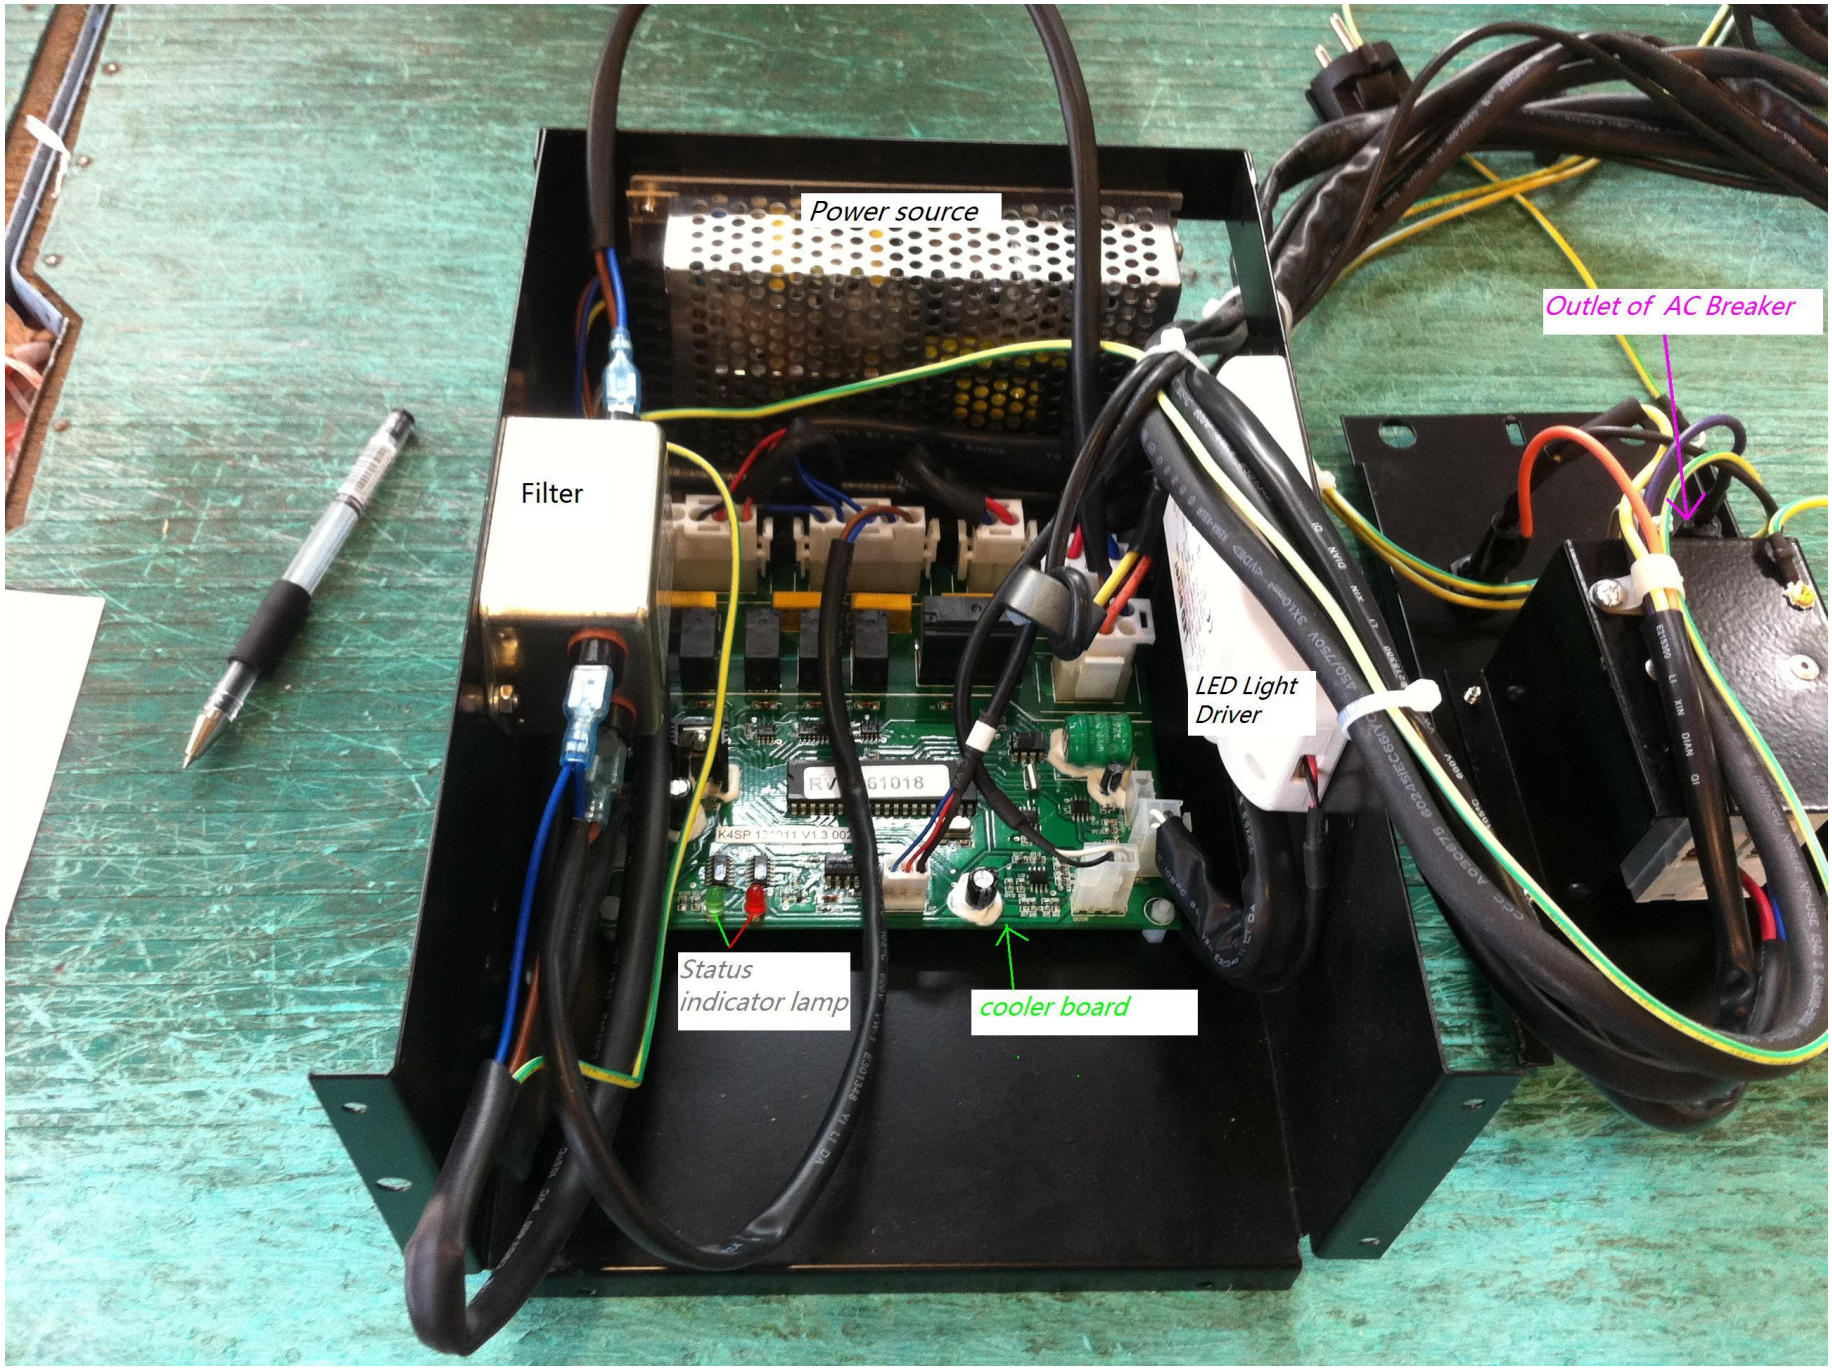

1. To judge if there is a communication between main board and cooler board, please check if the time that you set up can go on or updating.
2. To judge the cooling system, A. there is 24V and 9v on the cooler board (DC power), 5V control the Eprom, if the E Prom can work, when you turn on the breaker, you can hear click voice, that means the relay of compressor can work, the relay is on, then there is 110V for compressor. If the E prom is broken, then there isn't 5V to control relay, so firstly change an E prom. If E prom is no problem, after the door switch be sealed, one minute later, you can hear if the evaporator fan work, if the condenser fan work. If the machine has arrived at the temperature that you set up, the two fans don't work.
3. If there isn't 9V, the keypad is without light back, the LCD screen can't show text, no 9v， no 5V.


Power source
Filter
Outlet of AC Breaker
LED Light Driver
Status indicator lamp
cooler board